

METHOD STATEMENT

Page 1

TARKETT - ACCZENT EXCELLENCE 70 (CONTRACT WOOD, NATURE & TOPAZ), ACCZENT EXCELLENCE 80, ACCZENT EVOLUTION, ACCZENT CLASSIC 40, ACCZENT ESSENTIAL 55, AQUARELLE FLOORING

2016

The preparation/dryness of the subfloor and installation procedures should all be as BS 8203: 2001. i.e.: The relative humidity of a solid subfloor should be below 75%RH when tested with a Hygrometer as described in this British Standard.

Prior to selecting a smoothing compound, it will be necessary to investigate what type of traffic the floorcovering once installed will be subjected to. Latex smoothing compounds are not suitable for areas that will receive heavy traffic, especially heavy-wheeled traffic with narrow wheels. Never subject a newly installed floorcovering to heavy wheeled traffic at an early stage, as this will disperse trowelled applied adhesive from below the floorcovering which may result in future problems. Wheels should be + 30mm and preferably made of neoprene. If it is necessary to traffic the floorcovering at an early stage, protect the installation with hardboard or plywood.

Recent studies have shown that micro-organisms can colonise, under certain conditions, the area between the subfloor (wooden or cement) and the installed flooring. These micro-organisms can thrive in warm, damp conditions where there is sufficient 'food' available – for example, certain types of levelling compound used prior to the flooring installation. During their normal life-cycle, these micro-organisms produce a colorant, usually pink, purple, red or black (but can be other colours), which can 'bleed' through to the surface of the PVC flooring product over a period of several months or longer.

Advice should always be sought from the manufacturers of subfloor preparations and adhesives prior to installation, to ensure that their products are suitable for the environment in which the PVC flooring is to be laid – this advice may include using products that contain biocides or of specific resin types.

For wooden fabricated underlay e.g. plywood, care must be taken to store the material in an area where it will not become damp or contaminated.

The 'bleed' through of colorant created by micro-biological activity below PVC floorcovering products is not attributable to a product/manufacturing fault.

For specific subfloor types and preparation, please refer to our Specifications Subfloor Types.

Although Tarkett may on occasion list a choice of adhesive, levelling compound and surface damp proof membrane manufacturers and types, we do not however guarantee the products listed (except for Tarkett wood adhesives) or suggest that the list of products or manufactures, are complete or current. Tarkett would not accept any liability (except for Tarkett wood adhesives) for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive, levelling compound and surface damp proof membrane manufacturer and flooring contractor to ensure the products being used are appropriate for use and applied in accordance with the manufacturers recommendations.

It is imperative that underfloor heating systems have been previously commissioned and found to be functioning correctly prior to the floor finish being installed. Ensure that the underfloor heating system is switched off 48 hours prior to the floorcovering installation commencing and remains off for at least 48 hours after the installation is complete. During the period of decommissioning of the underfloor heating system, an alternative heating source should be provided, if required, to ensure that the area of installation is kept at a constant temperature of 18°C - 27°C. Gradually increase the temperature over a number of days by only a few degrees per day until the desired room temperature is reached. The temperature should never exceed the floorcovering industry agreed maximum of 27°C at the underside of the floorcovering (the adhesive line). Failure to follow these guidelines can result in the floorcovering de-bonding, joints opening, and on some occasions discolouring, all which can occur within a long or short period of time.

CONDITIONING

It is important that the material (rolls) is stored in an upright position. 24 hours prior to use, the material should be cut to the desired lengths and acclimatised within the area to be installed by laying it flat on a prepared, clean subfloor at a temperature of 18° - 27°C. This temperature should be maintained throughout the duration of the installation. The minimum temperature of the subfloor should be 15°C. Care should be taken when handling all types of floorcoverings to ensure that safety procedures are followed and damage does not occur to the material.

METHOD STATEMENT

Page 2

TARKETT - ACCZENT EXCELLENCE 70 (CONTRACT WOOD, NATURE & TOPAZ), ACCZENT EXCELLENCE 80, ACCZENT EVOLUTION, ACCZENT CLASSIC 40, ACCZENT ESSENTIAL 55, AQUARELLE FLOORING

2016

INSTALLATION

1. Prepare the subfloor as necessary and remove all trace of debris.
2. Ensure that material with identical batch numbers are allocated within each separate area to be installed. Whenever possible, consecutive roll numbers should be installed in sequence.
3. Plan the sheet direction of the area to be installed to ensure whenever possible that joins do not coincide with doorways or main traffic lanes. Identify the approx location of each sheet.
4. Cut off the lengths of the material 10cm longer than the net size measured.
5. Scribe the first sheet down the length of the room with the two ends lapped up the wall. Cut down the scribe mark using utility knives with straight and hook blades removing the scrap material and place into position.
6. Place the sheet tightly against the wall and draw a pencil line down the edge of the heterogeneous vinyl on the subfloor lengthways opposite the scribed wall.
7. When in position draw a pencil line at 90° to the edge of the sheet from the heterogeneous vinyl onto the subfloor using a ruler. This cross mark should be approximately 20cm away from one of the ends still lapped up the wall.
8. Slide back the sheet along the first pencil line until the end of the sheet lies flat on the subfloor and slightly short of the wall. The two cross lines will now have moved apart.
9. Set the long scribes to the distance between the two lines and scribe this size from the wall onto the heterogeneous vinyl at the same time keeping the scribes parallel with the sheet edge. Cut and remove the surplus as before.
10. Slide the heterogeneous vinyl back into its previous position with the material now fitted to the long wall and end wall. Repeat the last procedure for the end still lapped up the opposite wall.
11. For all over designs - all consecutive sheets should be laid in the opposite direction to the previous sheet installed, (*reverse sheets) i.e.: 1st sheet facing north, 2nd sheet facing south, etc. Print or arrows on the underside of the material can identify the direction of the sheets.
 - Do not reverse heterogeneous vinyl Wood pattern, i.e. install consecutive sheets in the same direction.
12. Overlap the next sheet by 2.5cm (possibly less for wood effect as the width and length of plank repeat should be achieved) with one end already 2 - 3cm short of one wall. Adjust the scribes to scribe a small amount off this end of the sheet and cut to size. Slide this end of the sheet into position against the wall. Now repeat the procedure adopted for fitting the previous sheet where the heterogeneous vinyl was still lapped up the remaining wall.
13. **For The More patterned Acczent Excellence 80 Focus Range**
 - lay the lengths in the direction they naturally unroll (all in the same direction)
 - overlap the lengths to join up the pattern or decoration and cut through both layers using a straight-edge and straight blade knife.
14. This entire procedure should be copied for all consecutive sheets apart from the last sheet, which should be installed in the same manner as the first.
15. Only install the amount of floorcovering that can be adhered to a subfloor in one day.
16. Just prior to adhering the heterogeneous vinyl, all joins should be re-cut. Strike a chalk-line 1cm in from the overlapped edge of the top sheet (except wood designs: width and length of plank repeat to be achieved) and re-cut using a knife and straightedge by cutting through 2/3 of the thickness of the sheet prior to cutting with a hook knife. Use this newly cut edge to guide a pin-vice along onto the sheet below. Deepen this cut with a utility knife and finally undercut with a hook knife.

or
17. Cut a good edge on the material and then overlap uncut edge on top. Scribe bottom edge of the heterogeneous vinyl top sheet by using a short scribe. (over & unders)

METHOD STATEMENT

Page 3

TARKETT - ACCZENT EXCELLENCE 70 (CONTRACT WOOD, NATURE & TOPAZ), ACCZENT EXCELLENCE 80, ACCZENT EVOLUTION, ACCZENT CLASSIC 40, ACCZENT ESSENTIAL 55, AQUARELLE FLOORING

2016

18. Carefully pull the sheets back half their length and re-sweep the back of the heterogeneous vinyl and the subfloor to ensure that no debris is present that may visually impair the installation and cause premature wear.
19. Apply an acrylic adhesive from the current adhesive range of Tarkett Embond 170.
20. The adhesive should be applied using an appropriate 'V' notched trowel (**pressure sensitive adhesives should be trowel applied and then flattened with a lambs wool roller – please seek adhesive manufacturers advice**). It is important that the notches on this trowel remain the correct size throughout the duration of the installation. Place the heterogeneous vinyl into the adhesive whilst wet (**pressure sensitive – seek manufacturers advice**) and roll with a 68Kg roller in both directions. Do not roll the last 25cm section of the heterogeneous vinyl, as this will ensure that the second half of the sheet is easily pulled back to expose the edge of adhesive.
21. Repeat procedure for second half of the sheets as soon as the first half has been adhered.
22. Repeat rolling at 15 minute intervals until fully bonded to the subfloor, paying close attention to sheet joins, cross-joins and ends of sheets. Inaccessible areas should be rolled with a hand roller. Remove any excess of adhesive with a cloth moistened with water or if dry, use nothing stronger than white spirit.
23. After a lapse of at least 24 hours, hot weld with matching heterogeneous vinyl weld rod at a temperature of between 250-300°C when the welding equipment is fitted with a Tarkett speed-weld nozzle, item - 1258012.





**** If preferred heterogeneous vinyl Wood and Focus designs can be cold welded using Item Number 1419001. This cold weld is clear in colour, which may be preferred to the weld rod, which is coloured. This would be possible if both the wood, focus design effect and standard product are installed into a domestic style situations.**

Care should be taken when using cold weld to prevent over application and spillages.

VARIOUS TYPES OF COVING

SELF COVING

It is possible to self-cove product over a 2 & 3.8cm radius cove former and up a wall to a desired height where it is normally finished to a PVC capping seal. This can be achieved in one piece with a minimum of joins, although there will have to be internal and external vertical joins. Adhere all vertical surfaces and cove detail with a solvent free contact adhesive.

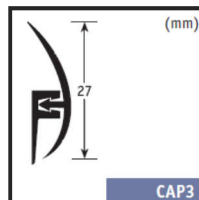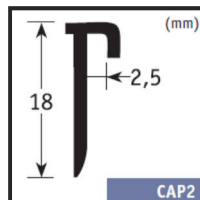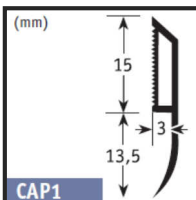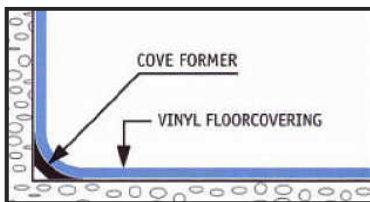


METHOD STATEMENT

Page 4

TARKETT - ACCZENT EXCELLENCE 70 (CONTRACT WOOD, NATURE & TOPAZ), ACCZENT EXCELLENCE 80, ACCZENT EVOLUTION, ACCZENT CLASSIC 40, ACCZENT ESSENTIAL 55, AQUARELLE FLOORING


2016

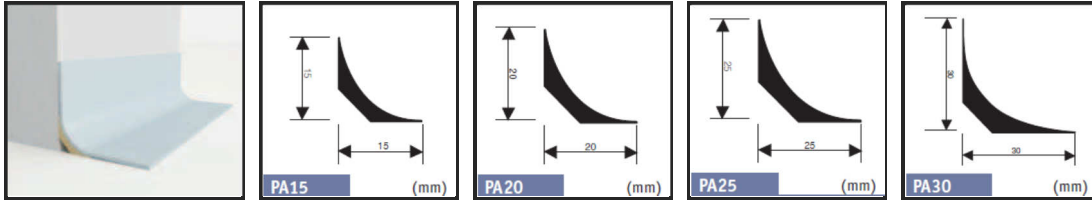

Heterogeneous vinyl Wood designs may look ascetically more pleasing if the direction of the wood grain of the wood is kept in the same covered direction around the room.

TARKETT PVC SET-IN COVING

Fix the coving to a prepared wall and subfloor with a contact adhesive. Measure the area to be installed and cut off the lengths of the vinyl so that they overlap onto the cove by approximately 2cm. Overlap sheets by 2.5cm and re-cut to leave a close butt joint. Adhere the vinyl using the same acrylic adhesive as before for the sheet (whilst still overlapping onto the cove) up to the edge of the set-in cove. Using short scribes, (over & unders) scribe and cut the vinyl to the edge of the set-in cove and roll with a 68Kg roller whilst the adhesive is still wet. After the lapse of at least 24 hours, hot weld all sheet to sheet and sheet to set-in coving joints with the matching/Colour coded product welding rod.

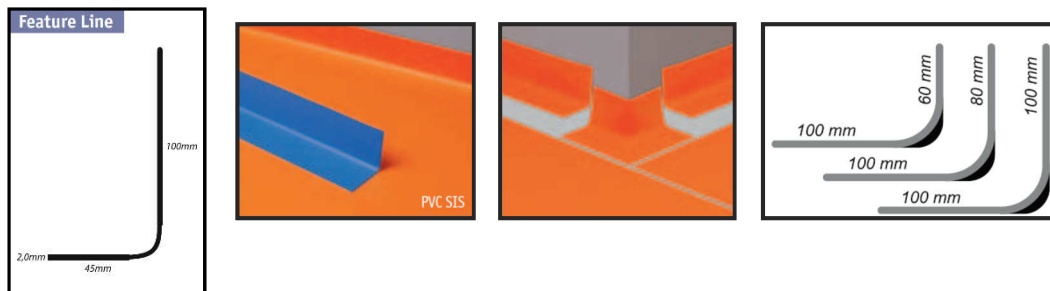

PVC SIT-ON COVING

This type of coving should not be used when watertight joints are required. It is normally used as an alternative to a wooden skirting in areas that will not be subjected to large amounts of surface applied water.

Fix the coving to a prepared wall with a contact adhesive. Prior to adhering the sit-on coving to the wall, the scribed edge of the floorcovering to the wall can be sealed with a sealant. This will provide extra protection to the floorcovering from surface moisture attack, but should not be used as a cheaper alternative to a pre-formed coving or self-coving when a watertight joint is required.

HOT WELDING HETEROGENEOUS VINYL

1. Allow at least 24 hours to lapse prior to hot welding with the heterogeneous vinyl welding cable. **** If preferred heterogeneous vinyl Wood can be cold welded using Item Number 1419001. This cold weld is clear in colour, which may be preferred to the weld rod which is coloured. Care should be taken when using cold weld to prevent over application and spillages.**
2. Groove seams using a Tarkett Seam Groover (1258027) & Blade (1258028), "P" type grooving tool or an automatic seam router.



3. The product should be grooved 2/3 into its thickness.
4. Make sure the groove is clear of all debris and excess adhesive prior to commencing welding.

METHOD STATEMENT

Page 5

TARKETT - ACCZENT EXCELLENCE 70 (CONTRACT WOOD, NATURE & TOPAZ), ACCZENT EXCELLENCE 80, ACCZENT EVOLUTION, ACCZENT CLASSIC 40, ACCZENT ESSENTIAL 55, AQUARELLE FLOORING

2016

5. The recommended welding temperature is 250-300°C when fitted with a Tarkett speed-weld nozzle, item - 1258012.



6. Using a Leister hot air welding gun fitted with the speed-weld nozzle, this will require the setting to be approx 5-6. If unsure consult manufacturer's instructions for correct setting. Set the welding gun at this temperature for several minutes prior to commencing welding to attain the correct temperature.
7. Try out the welding operation on a scrap piece of product prior to welding the floor joins.
8. Weld at approximately 2m a minute. Preferably 2 people welding. One operative welding at least 3m ahead of the other prior to the second person trimming the cable 1mm proud of the product with the aid of a spatula knife inserted into a welding slide. The weld should then be allowed to cool down. Finally trim the weld cable flush to the surface of the product using the spatula knife only.

METHOD STATEMENT

Page 6

TARKETT - ACCZENT EXCELLENCE 70 (CONTRACT WOOD, NATURE & TOPAZ), ACCZENT EXCELLENCE 80, ACCZENT EVOLUTION, ACCZENT CLASSIC 40, ACCZENT ESSENTIAL 55, AQUARELLE FLOORING


2016

Installation / Welding

COLD LIQUID WELDING (ONLY FOR LIGHT TRAFFIC APPLICATIONS)

1. The sheets must overlap

The joint can then be prepared using a straightedge and a sharp knife to cut along the overlap, through both thicknesses at once. This should result in an extremely tight butt joint.

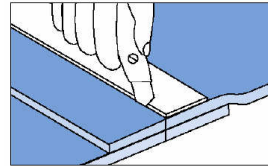

2. Apply the tape to the joint



3. Cut the tape along the seam (rolling knife recommended)



4. Cold welding procedure



Important: make sure you apply enough liquid along all the joints.

5. Remove the tape (after approx. 10 minutes)

Note: do not remove any excess cold weld. It will disappear during normal wear. The floorcovering should be left undisturbed for 24 hours after cold welding.

- Best for HE PVC applications
- Not valid for HO products
- Not valid for tiles, nor LVT.



Cold Weld Fluid
Ref: 1419 001

